


Arena™ Application Instructions

Step 1: First Coat of Arena™



Apply the first coat of Arena™.

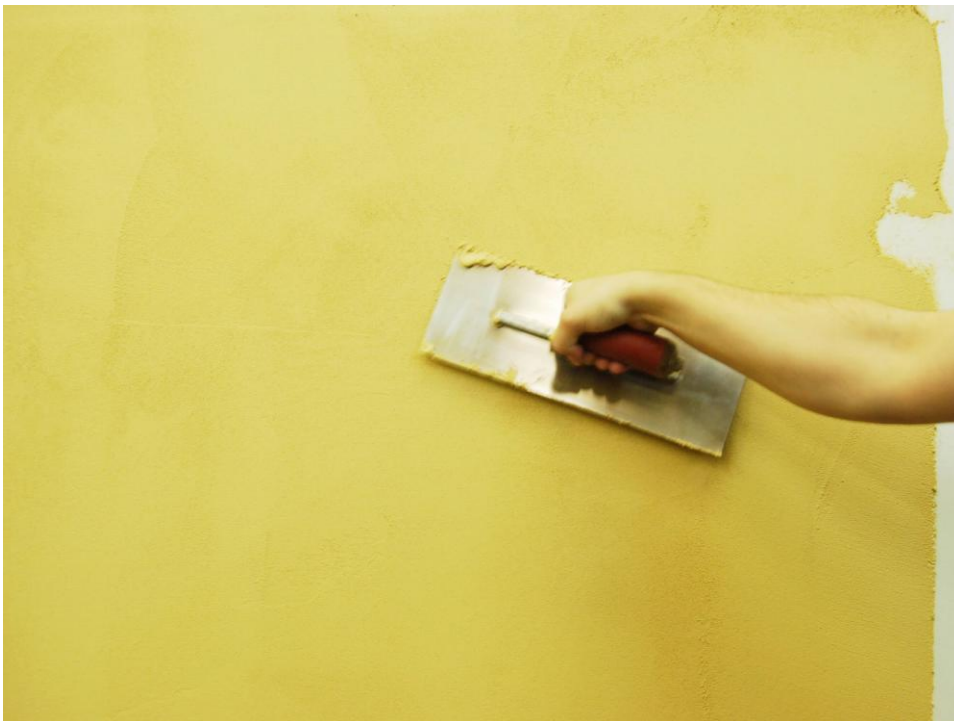

Apply a thin even coat of Arena™ using random, decorative trowel strokes to an area of about 4 square feet.

Arena™ Application Instructions

Step 2: Texture Coat



While first coat is still wet, apply a texture coat of Arena™.



Finished texture coat.

Arena™ Application Instructions

Step 3: Colorwash




Distress a sponge float by tearing the edges. This will prevent leaving linear float impressions during use.



While texture coat is still wet, lightly mist VariStain™ onto the surface.

Arena™ Application Instructions

Step 3: Colorwash

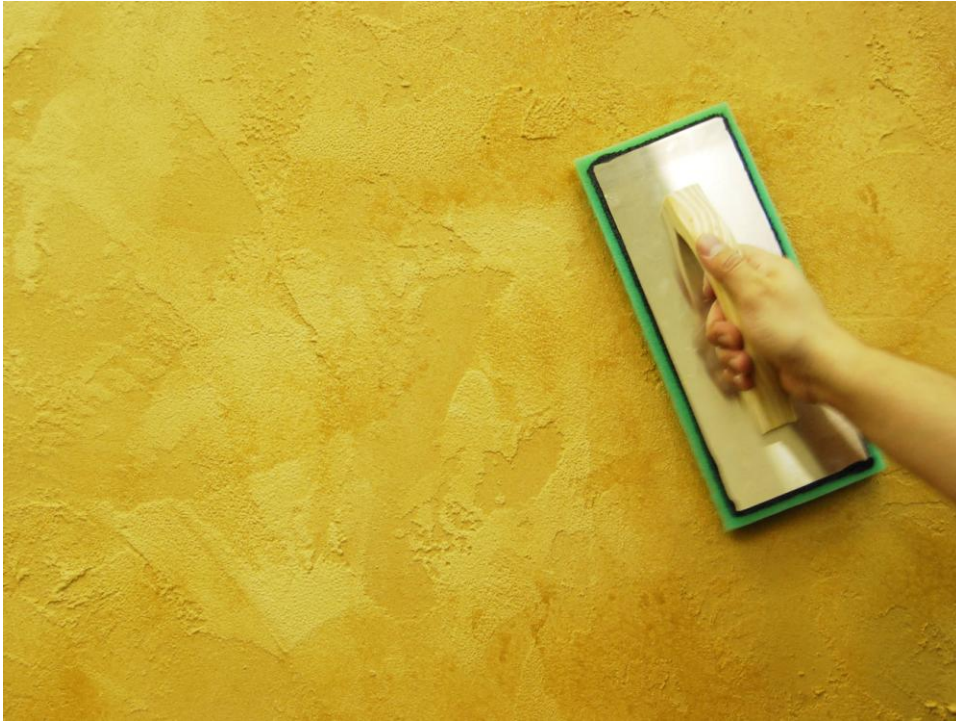

Use the distressed float to press the VariStain™ into the finish and remove any spots or drips.



Finished Arena™.